

ENTERPRISE • SPIRIT • HELLFIRE SLIPSTREAMER • TURBO • SPORTSHIELD

INSTALLATION INSTRUCTIONS

IMPORTANT

- A. Before installing fairing, please read instructions to get a proper fit. Any variations from these installation instructions could have an adverse effect on the performance of the fairing or negate any present or future warranty.

SHIELD INSTALLATION

Holding the shield on the lower half of the legs, slide it over the headlight and behind the turn signals, spreading the legs slightly as you work it down around the forks. Lower legs should be behind the forks.

UPPER MOUNT & ROD INSTALLATION

Install upper cap and barrel as shown in **FIGURE A**. **NOTE: Hand tighten only.**

HANDLEBAR CLAMP INSTALLATION

Install handlebar clamps and barrels as shown in **FIGURE A**. Barrels may be positioned either on the front or rear side of handlebars depending on handlebar configuration.

LOWER MOUNT INSTALLATION (ENTERPRISE, SPIRIT & HELLFIRE)

- A. Install clamps on fork tubes between the triple clamps as shown in **FIGURE B**. The clamps are designed to accommodate various fork tube diameters. Wrap the clamp and gasket around the fork tube forming the configuration in **FIGURE B**. Using the most advantageous of the four holes in the side of the fork tube clamp.

***NOTE: INCORRECT HOLE SELECTION WILL PREVENT THE FORK TUBE CLAMP FROM TIGHTENING UP.**

- B. Install shield in front of fork tube clamp as shown in **FIGURE B**.

LOWER MOUNT INSTALLATION (SLIPSTREAMER, TURBO & S-08 SPORT SHIELD)

- A. Install the lower fork tube clamps as stated in instruction A as shown in **FIGURE B**.
- B. Take the mounting bracket and align the short angled side on the extension foot of the clamp as shown in **FIGURE C**. Connect with the included hardware but do not tighten at this time. Align the longer side of the mounting bracket with the grommet hole in the windshield and insert bolt through grommet and secure with included hardware as shown in **FIGURE C**.

FINAL ADJUSTMENTS

When shield is attached at all four points, adjust shield to proper angle and tighten bolts. **Note: After initial installation and approximately 100 miles, check mounting hardware for tightness.**

CLEANING AND MAINTENANCE

For proper cleaning, wash with a mild soap or detergent and luke warm water. Use **Slipstreamer Cleaner/Polish** to keep the plastic looking like new. To remove small scratches or scuffs, use **Slipstreamer Scratch Remover**. After scratch removal you must polish the shield with **Slipstreamer Cleaner/Polish** to bring back the luster. Any drying of the shield should be done with a clean, soft 100% cotton towel or microfiber cloth. (Cloth baby diapers work excellent!!) **DO NOT USE PAPER TOWELS!**

WARNING:


NEVER USE ABRASIVE CLEANERS, HOUSEHOLD CLEANERS, GLASS CLEANERS, GRITTY CLOTHS, PAPER TOWELS OR STRONG SOLVENTS SUCH AS ALCOHOL, AMMONIA, ACETONE, CARBON TETRACHLORIDE, ETC. ALSO, PRODUCTS SUCH AS RAIN-X OR ARMORALL SHOULD NOT BE USED AS THESE PRODUCTS WILL BREAK DOWN THE PLASTIC CAUSING SPIDER CRACKING CALLED "CRAZING". **Rule of thumb: If it is made for glass DO NOT use it on plastic!!**

**FIGURE A
UPPER MOUNT ASSEMBLY**



Parts List		
ITEM	QTY	DESCRIPTION
1	1	Cap
2	1	Rubber Washer
3	1	Barrel
4	1	Wingbolt
5	1	Clamp Bolt
6	1	Attaching Post
7	1	Clamp - Part A
8	1	Clamp - Part B
9	1	Lockwasher
10	1	Upper Mount Rod

FIGURE B

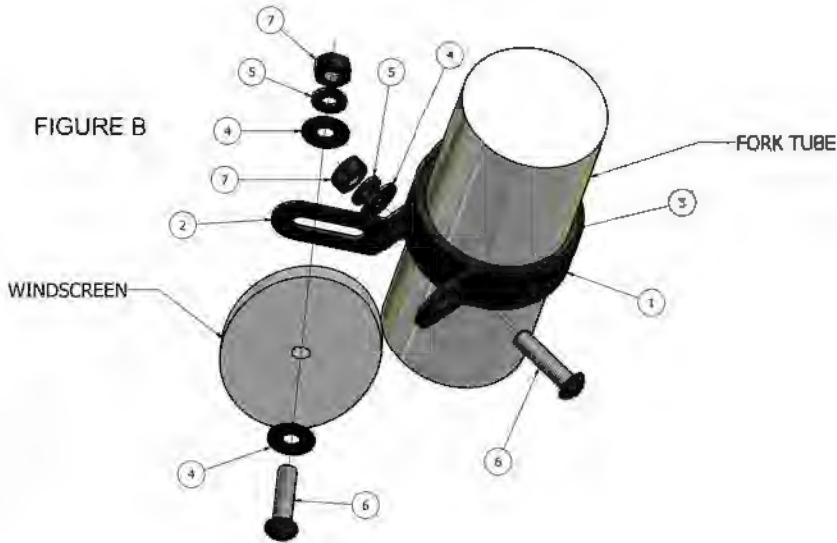


**Enterprise, Spirit & Hellfire
Lower Mount Assembly**

Parts List		
ITEM	QTY	DESCRIPTION
1	1	Fork Clamp Part A
2	1	Fork Clamp Part B
3	1	Rubber Collar
4	3	Flat Washer
5	2	Lockwasher
6	2	Bolt
7	2	Hexnut

COMPONENTS AND QUANTITIES SHOWN ARE PER FORK TUBE
REPEAT AS A MIRROR IMAGE FOR OPPOSING FORK

FIGURE C

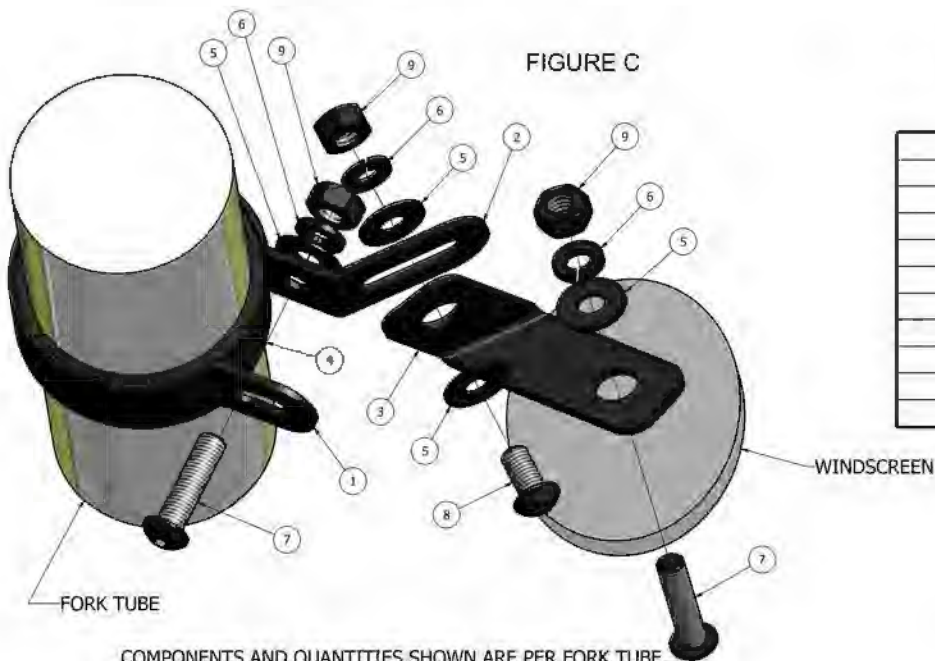

**Slipstreamer, Turbo & S-08 Sport Shield
Lower Mount Assembly**

Parts List		
ITEM	QTY	DESCRIPTION
1	1	Fork Clamp Part A
2	1	Fork Clamp Part B
3	1	Mounting Bracket
4	1	Rubber Collar
5	4	Flat Washer
6	3	Lockwasher
7	2	Bolt, Long
8	1	Bolt, Short
9	3	Hexnut

COMPONENTS AND QUANTITIES SHOWN ARE PER FORK TUBE
REPEAT AS A MIRROR IMAGE FOR OPPOSING FORK